



Test Equipment Depot
1-800-517-8431

99 Washington Street
Melrose, MA 02176
Phone 781-665-1400
Toll Free 1-800-517-8431





9440

USER MANUAL

DEPLOYMENT OPERATION

1. To deploy, gently pull the red latch (as per diagram on the leg) whilst lifting the outer collar upwards until all three legs release.
2. Once all three legs have touched the floor, lift the switch housing upwards (as per diagram on the leg) until the red latch clicks into place.

MAST OPERATION

1. Release each of the cam clamps and raise until desired height, then clamp to hold in place.
2. To collapse the mast, reverse the procedure taking care to keep fingers clear of moving parts.

LIGHT OPERATION

1. Press keypad once for full power
2. Press again for low power
3. Press again to switch off

CAUTION, READ THIS NOTICE BEFORE USE:
Keep fingers clear of moving parts at all times – failure to comply could result in injury.



GENTLY PULL THE RED LATCH. UNTIL ALL THREE LEGS RELEASE.

STORAGE OPERATION

1. To close, ensure light head is facing upwards then pull the red latch gently until the base of the product slides down to the floor.
2. Lift the outer collar upwards until level with the light head. Then pull all three legs in using both hands and lift them over their locking fork at the base whilst holding the latch in the release position (as per diagram on main body). The legs are locked when the window at the bottom of each leg is black and the latch is in its locked position.

Note: Please look closely at the bottom of the legs to understand how they are locked in place – the legs must lift upwards before they can locate. The latch must be released for the legs to move upwards.

BATTERY STATUS INDICATION

- | | | |
|--------|---|--------------------|
| Green | = | 60 – 100% capacity |
| Orange | = | 20 – 60% capacity |
| Red | = | 0 – 20% capacity |



CHARGING:

CAUTION: PLEASE READ BEFORE USE.

WARNING: Charging must be carried out with the base of the product facing upwards

USE APPROVED CHARGER ONLY AND ALWAYS REMOVE CHARGER ONCE PRODUCT IS FULLY CHARGED.

ONLY USE CHARGER IN DRY ENVIRONMENT.

1. Turn product upside down, remove dust cap on charging socket and plug the charger in. Twist to lock.
2. Plug the charger into the electrical outlet and switch on.










Remove dust cap to connect the charger

PRODUCT CARE:

To ensure maximum product life please observe the following points:

1. Keep moving parts free of foreign objects.
2. Do not stand on product.
3. Avoid use on extreme gradients.
4. Ensure charging dust cap is replaced after charging.
5. Do not use if damaged – return to dealer.

BATTERY MODE AND STATUS INDICATION LIGHTS

MODE	DESCRIPTION	LED INDICATION
Standby	Yellow Permanent on	YELLOW 
Pre-Charge	Yellow slow flashing	YELLOW 
Waiting to validate temperature	Yellow and Green alternating	YELLOW GREEN 
Rapid Charge	Green fast flashing	GREEN 
Maintenance charge	Green slow flashing	GREEN 
Ready	Green Permanent on	GREEN 
Error	Yellow fast flashing	

SPECIFICATIONS	
LIGHT SOURCE	LED
TESTED LUMEN VALUE	1200 (Low) 2400 (High)
BATTERY TYPE:	NiMH 8 cell 9.6 volt 9 amp/hr.
BATTERY CHARGING TIME:	8 hrs
BATTERY BURN TIME:	6 hrs.(Low) 3 hrs. (High)